

WAGAN Corp. Limited Warranty Registration Form

All WAGAN Corporation products are warranted to the original purchaser of this product.
Warranty Duration: This product is warranted to the original purchaser for a period of one (1) Year from the original purchase date, to be free of defects in material and workmanship. WAGAN Corporation disclaims any liability for consequential damages. In no event will WAGAN Corporation be responsible for any amount of damages beyond the amount paid for the product at retail. In the even of a defective item, please ship the item, prepaid, with a complete explanation of the problem, your name, address and daytime phone number. WAGAN Corporation will, at its option, replaces or repair the defective part. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA and does not extend to any units which have been used in violation of written instructions furnished.
Warranty Disclaimers: This warranty is in-lieu of all warranties expressed or implied and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract.
Warranty Performance: During the above one (1) Year warranty period, a product with a defect will be replaced with a comparable model when the product is returned to WAGAN Corporation with an original store receipt. The replacement product will be in warranty for the balance of the one (1) Year warranty period.

- Please activate my limited warranty for WAGAN Corp. Mini Stepper
- Enclosed copy of original sales receipt.

Name			
Mail Address			
City			
State, Zip Code			
Item Purchased	Mini Stepper		
Stores Name			
Date of Purchase			
Signature		Date	

All WAGAN Corporation Products must be registered within (30) days of purchased to activate this warranty. Mail the complete registration form, along with a copy of the original receipt to:

Attn: Customer Service
WAGAN Corporation
3589 Yale Way
Fremont, CA 94538

© 2004 WAGAN Corp.



Item no. 2273

Mini Stepper™



User's Manual

Mini Stepper by Wagan Tech


USER'S MANUAL — Please read before using this equipment.

Dear valued customer,

Thank you for purchasing Wagan Tech Mini Stepper fitness equipment. We know you will be very happy with our products. Please read before use. This user manual will help you in learning the method of operation and maintenance. Please follow the recommendations in this manual. If you have any questions with regard to assembly or operation, please contact us at 1-800-231-5806 ext. 101 or by email at customerservice@wagan.com

If the specifications, diagrams, and functions are changed, we will not be able to give notice separately.

Note: while using this equipment, please adhere strictly to the instructions of this manual. We will not be held responsible for any harm or damage caused by actions which breach the rules in this manual.

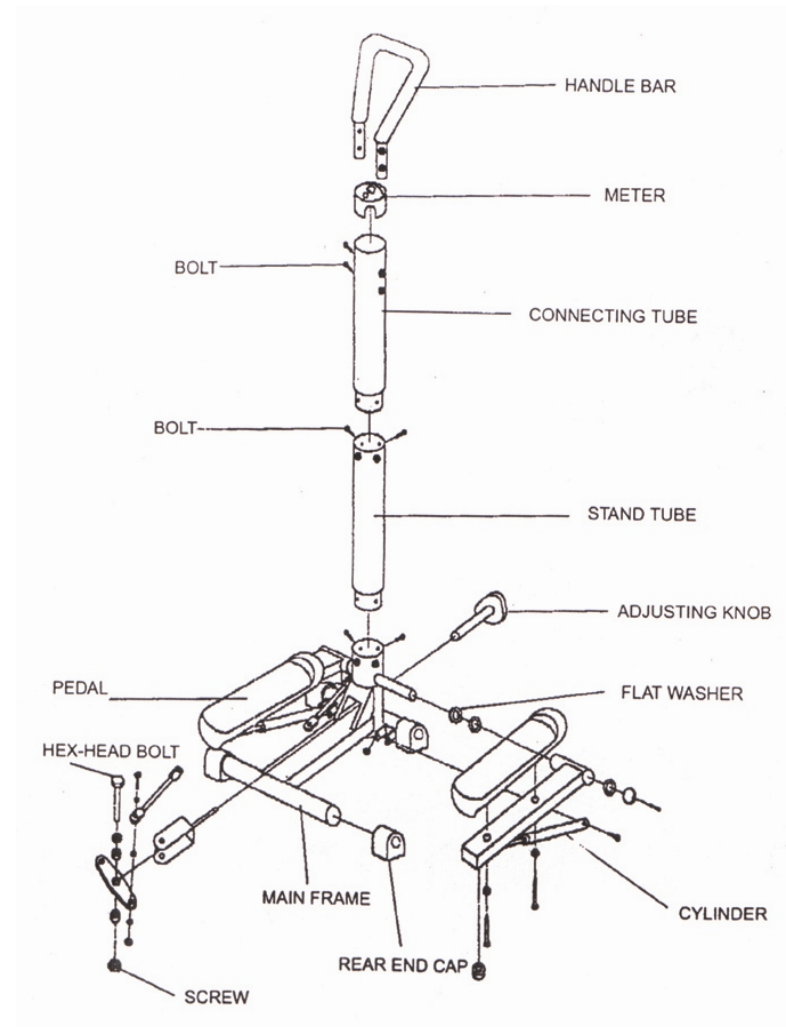

TECHNICAL REQUIREMENT

1. Lubricate all bearings before assembly.
2. Make sure the cable and pulleys are steady.
3. To avoid ruining the pedal, connect the pedal to the bottom of pedal sub-assembly.
4. Adjust steel cable to stabilize.
5. Properly assembly all the hardware before exercise.

MAINTENANCE

The cable and pulley can suffer heavy friction, and are prone to wearing out. Therefore, please follow these instructions:

1. Inspect the Mini Stepper at regular intervals to find if there are joints loose and parts damaged/worn.
2. Put lubricating oil or grease to revolving parts at 3 months' intervals at least in places such as the inner race of bearing and plastic bush.
3. Store the Mini Stepper in cool and dry environment.
4. Don't clean the surface of the Mini Stepper with an organic solvent (i.e. gasoline, benzene, etc.) or the surface will be damaged.

5. Inspect the cable, pulleys, bearings, plastic brushes, and cylinders, etc. before exercise. You can change the parts for cable-pulley set if damaged. Make sure that there are no such troubles as; loose joints, pulleys inclining, wobbling, or they are not revolving. Look to see if the cable came out of the groove of pulleys. Check if cover of cable is worn out.
6. Always keep pulleys turning smoothly. Use lubricating grease on the bearings, to minimize noise or unsmooth revolutions.
7. If the pulley begins to slant, it can cause wear and tear to the cable and pulley itself. In such case, prompt adjustment is necessary.
8. In the event that the pulley and cable are damaged, replace them with spare parts of the same specifications.
9. Turn the adjusting unit to keep the cable tight properly.
10. This product was designed for individuals weighing up to 225 lbs only.

ATTENTION

We would like to recommend that you utilize your Mini Stepper for half an hour every day. We believe you will feel the marvelous effects of cardio-training about one month later. This Mini Stepper is excellent for use in office. Doing exercise during your work for a

rest can make you relaxed and energetic. Exercising during a break from work is extremely beneficial. Rather than feeling fatigue and exhausted, you will be refreshed and energized!

1. Persons with hypertension, obesity, and heart disease should not do strenuous exercise with the Mini Stepper.
2. Doing exercise when exhausted is not recommended.
3. We suggest you should keep your food structure reasonable: enough protein, vitamin, mineral clement and proper sugar.
4. Do some warm up exercise before training to avoid possible injury; for example: stretching arms, legs and back.
5. Please note the coordination of arms and legs. Try adding hand weights for a better workout.
6. Paces should be mild and gentle, and sudden actions are not recommended, to avoid possible injury to your body.

TIME READ-OUT SPECIFICATIONS

TIME-----00:00-59:59 Min
SPEED-----0-9999 Strides/Min
COUNT-----0-9999 Times
CALORIES-----0-9999 Cal

KEYS FUNCTION

- MODE: 1. This key allows you to select and lock on to a particular function you want.
2. Hold the key for 3 – 4 second to have all function values reset. (total reset)

RESET: The unit will be reset by pressing the key.

OPERATION PROCEDURES

- AUTO ON/OFF: 1. The system turns on when any key is pressed or when it senses an input from the speed sensor.
2. The monitor will be automatically shut off if there is no signal in 4 or 5 minutes.

FUNCTION:

- TIME: 1. By pressing the MODE key until the pointer advance to TIME.
2. When the speed sensor receives any signal input, it starts to count up.
3. It accumulates workout time when staring exercise.

SPEED: Displays current speed during workout.

- COUNT: 1. Press the MODE key until the pointer changes to COUNT.
2. When the speed sensor receives any signal input, it starts to count up.
3. It accumulates workout counts when staring exercise.

CALORIES: 1. Press the MODE key until the pointer changes to CAL.

2. When the speed sensor receives any signal input, it starts to count up.
3. It accumulates calories consumed when starting exercise.

SCAN: Automatic display of the following functions in the order shown:

TIME --> CALORIES --> SPEED (STRIDES/MIN)

Remarks: Regarding the use of the electronic meter, please refer to the manual attached for meter.

BATTERY

1. Please replace the batteries if improper display appears.
2. The monitor uses one battery.

WARNING

1. First, fasten all of the bolts, nuts, and screws; making sure that the cable moves in the groove of pulleys, meter works normally, and all the other parts are assembled correctly.
2. To test, grab the handle bar, stand on the stepper loosely with your eyes looking ahead, then move your feet up and down alternatively slowly and gently. Any sudden movements can cause possible injury to your body and the equipment.
3. When you exercise skillfully, you can release the handle bar or discharge the handle bar and lower the meter to the down position, then do your exercise more freely with your hands swinging back and forth.